

### Optional Accessories/Supplies

- AC Adapter/Charger (PN 877084)
- Remote Microphone (PN 877193)
- Telephone Record Adapter (PN 279142)
- Bulk Cassette Eraser (PN 877182)
- Minicassettes (PN 877050) (box of 5)
- Cassette Mailing Envelope (PN 877642) (box of 25)
- Minicassette Storage Case (PN 877192)

### Limited Warranty

For portable dictation units Dictaphone's warranty service will be limited to necessary adjustments, repairs and parts replacements, not occasioned by accident, misuse or casualty, for thirty (30) days from the date of delivery.

Dictaphone's obligations hereunder are limited as set forth hereinabove. The foregoing are Purchaser's exclusive remedies.

Dictaphone assumes no liability for special or consequential damages. This Limited Warranty applies only (a) to new equipment and (b) when recommended recording media are used and when all work is performed by authorized Dictaphone personnel.

Purchaser may obtain service coverage beyond the service to be performed hereunder through Dictaphone's Assured Performance Plan.

### Specifications

Size:	Height—	114mm (4.5 in.)
	Width—	51mm (2.0 in.)
	Thickness—	19mm (0.8 in.)
Weight:		170g (6 oz.)
Power Source:		Two 1.5v AAA batteries or AC Adapter
Media:		M-30 Minicassette
Recording Time:		15 minutes per side
Tape Speed:		4 cm/sec (1.6 in./sec. nominal)
Rewind Time:		100 sec.
Frequency Response:		300-5,000hz
Distortion:		8% max.
S/N Ratio:		50db min.
Speaker Output:		250mw

DICTAPHONE, Dictamite and Q-Alert are registered trademarks of Dictaphone Corp., Rye, New York

MODEL 1253 L-433 25M Printed in Japan VNN0083-103


# Dictaphone

1253

**Dictamite MC  
Minicassette Portable  
Dictation Machine**

**Operating  
Instructions**



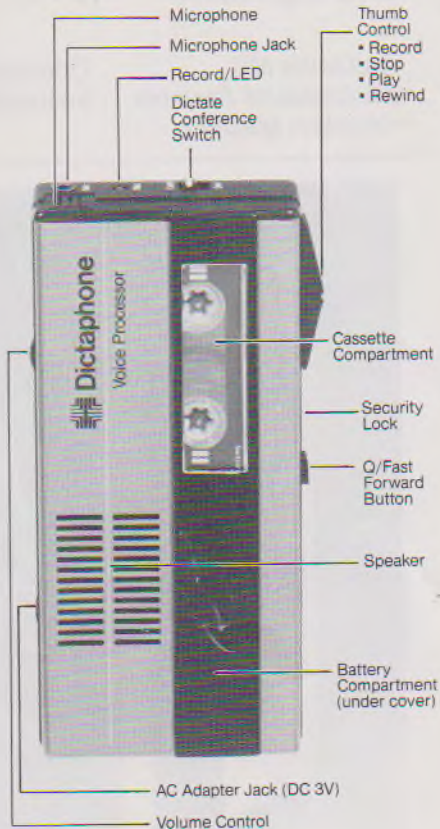

### **Loading Cassettes & Battery**

- Slide front cover down and remove it completely.
- Insert 2 AAA batteries into battery compartment.
- To load minicassette, move Thumb Control to STOP position. Insert minicassette with side #1 face up; edge of cassette containing exposed tape should face left.

### **Recording Dictation**

- Disengage Security Lock.
- Slide Thumb Control up to RECORD position. Record LED will light.

### **Review and Correction**

- Slide Thumb Control down and hold in REWIND position.
- Release Thumb Control to automatically return to PLAY position to review.
- To make corrections, listen to last "good" word and record over unwanted dictation.

### **Q-Alert<sup>®</sup> Indexing**

- Slide Thumb Control up to RECORD position.
- To record end-of-letter cues, press the Q/Fast Forward button and release. You will hear an audible confirmation signal as the cue signal is recorded.

### **Conference Recording**

- Record small conferences by moving the DICTATE/CONFERENCE switch to the CONFERENCE position, prior to activating the record mode.
- Place the unit in a central position, equally distant from each participant.

### **Forward Scanning**

- Place unit in PLAY.
- Press FAST FORWARD button.

### **Remote Microphone Recording**

- Plug optional Remote Microphone into Microphone (Mic) Jack.

### **Telephone Recording**

- Plug optional Telephone Recording Adapter into Microphone (Mic) Jack, and attach Adapter to telephone earpiece.

### **Warning Tones**

Continuous tone for:

- No cassette
- End of cassette

Short tone for:

- Cue indication